

Davis Remote GSM Station

Once setup the Davis Weatherlink Software will dial-out via your home Computer and analog modem direct to the GSM / GPRS modem. The GSM / GPRS modem will then connect and send the data request to the Davis Data Logger connected to a Davis Station Console or Davis Envoy. Once connected the Weatherlink Software will down the weather data from the Davis Data logger to your Computer. You can also watch the weather stats live via the Weatherlink Software.

